

arzum

REVOLUTION

AR5166-17 BLDC IONIC HAVA ÜFLEMELİ
ŞEKİLENDİRİCİ

AR5166-17 BLDC IONIC HOT AIR STYLER

AR5166-17 BLDC WARMLUFT STYLER

AR5166-17 فرشة تصفيف الشعر

KULLANMA KILAVUZU

INSTRUCTION MANUAL

GEBRAUCHSANWEISUNG

دليل المستخدم

1500 W

2

YIL

YEARS

JAHRE

سنة

GARANTI

WARANTY

GARANTIE

ضمان



6 ŞEKİLENDİRME
BAŞLIĞI



BLDC
MOTOR



ION
TEKNOLOJİSİ



THERMO HEAT
KONTROL

Yetkili servis listesi için kullanım kılavuzunun son sayfasına bakınız.

For the authorized service list, please check the last page of the user manual.

REVOLUTION

AR5166-17 BLDC IONIC HOT AIR STYLER



- 1- Main body
- 2- On - Off button
- 3- 4 level temperature adjustment button
- 4 - 3 level speed adjustment button
- 5- Temperature and speed adjustment indicator
- 6- Accessory release button

- 7- Dryer Nozzle
- 8- Comb Nozzle
- 9-50 mm ceramic round brush
- 10-50 mm ceramic oval brush
- 11- 34 mm right-hand curl nozzle
- 12- 34 mm left-hand curl nozzle
- 13- Hanging ring
- 14- 360° rotating cable entry

Thank you for purchasing **Arzum** brand **hot air styler**. We wish this product to make life easier for you, as with other Arzum products offered to you.

Arzum Revolution Ionic Hot Air Styler will make you happy with your preference thanks to its outstanding performance and high quality while ensuring that you dry and style your hair easily at a time.

In order to obtain utmost output from your appliance, please read carefully this user's manual and save it for further use.

IMPORTANT SAFEGUARDS

- Make sure that the voltage indicated on the **Arzum Revolution Ionic Hot Air Styler** corresponds with the mains voltage in your home. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.
- Your device is for household use only, not for commercial or industrial usage. Otherwise, inconvenient uses shall not be covered by the guarantee.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensor your mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- If this appliance is used in the bathroom, the device must be removed from the power source after using, because it might be dangerous in the near of water.
- The rating of residual current device RCD to be installed. It should have a cut-off current of not more than 30 mA. Ask a service agent or a similar qualified person.
- Do not use this appliance near bath tubs, wash basins, showers or other vessels containing water. Never place the appliance in water!
- Do not use the extension cables which provide insufficient current not to damage your appliance.
- Do not handle your machine which is dropped into water or any other liquid, disconnect from the outlet and before using again take it to Arzum Authorized Service to be controlled.
- **NEVER** use your appliance with wet hands and bare foot.
- Keep the cord of your hair sstyler away from the heating sections during and after use.
- If the cord or plug of your appliance is broken, or if it is damaged because of dropping or any other reason, then do not open inside and do not attempt to repair it yourself. In case of any failure, take it to **Arzum Authorized Service**. Care that for using the only original spare parts.

WARNING: Because the brush of your appliance warm up very much, take it away from your hand, eye, ear and face and do not allow contact your neck part. Keep only the handle and the hand-safe area.

- When the appliance is hot, when it operates or attached to the outlet, do not leave it on the surfaces which are not resistant to temperature such as wood, plastic, textile etc.
- Do not operate your appliance while the cord is wrapped.
- Avoid the actions which may damage the cord and plug of your appliance. Do not carry by cord; keep the plug to disconnect it from the outlet, but not by pulling its cord. Do not wind its cord around the appliance.
- Always keep the brush of your appliance clean. Do not use the substances such as dust, dirt, forming spray, gel, jelly etc.
- Before attaching or removing any of the attachments to your device, please wait for the attachments to cool down.
- **ALWAYS** unplug your appliance after using. Take care when your appliance is not in use, or before cleaning or caring, your appliance is unplugged.

- Be careful because your apparatus continues to keep the temperature for a certain period of time after its use. Always allow your appliance to cool before cleaning or storing away.
- Use your appliance for its intended purposes as recommended.

WARNING:

1- NEVER use your hair styler when in the bath, shower or in the areas in contact with water and when your hands are wet.



2- When you do not use your appliance, ALWAYS set the button off position for closing and unplug your appliance. If closing water while your appliance is off but plug, it will cause a danger.

3-When you want to remove the head of the appliance, be SURE to wait for your appliance to cool down. Since your appliance gets heated during use, the head of the appliance might be hot as well.

4-After using your appliance, wait for accessories to cool down before removing them as they might be hot.

BLDC MOTOR

- It dries and styles hair easily with its 1500 W high-performance and long-lasting BLDC motor.

THERMO-HEAT CONTROL

- Distributes heat evenly on the brush surface and prevents overheating. Provides safe and quick styling.

CERAMIC BRUSH SURFACES

- It protects hair strands and prevents heat damage. Also, it makes restores hair's natural shine.

ION TECHNOLOGY

- Ion technology prevents hair from static electricity. It makes hair easier to comb and gives a shiny appearance.

AUTOMATIC CLEANING FEATURE

- You can have your appliances motor cleaned automatically to extend its life and maintain its performance.
- Press and hold the temperature and speed buttons simultaneously

while your appliance is off position and then press the on-off button. The motor cleans by running in reverse for 8 seconds. During the cleaning process, the temperature LED indicator is off and the wind speed LED flashes. After the cleaning process is finished, the motor stops for about 1 second and then automatically returns to the last mode. The cleaning process is thus completed.

MEMORY MODE

· Automatically stores and saves temperature and speed adjustment for next use.

SPEED and TEMPERATURE ADJUSTMENT LEVELS


☀️ **Temperature adjustment button** : The LED indicator lights up red.

⚙️ **Hız ayarlama düğmesi** : The LED indicator lights up blue.

· The temperature adjustment button has 4 level. In the first level, it blows cold air and the LED warning light does not light up. As you increase the level, the temperature increases and all 3 LED lamps light up red.

· The speed adjustment button has 3 level. As you increase the level, the speed increases and all 3 LED lamps light up blue.

· You can start using it by choosing the temperature and speed level suitable for your hair.

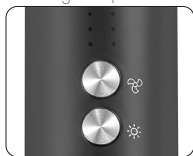

CHANGING THE ATTACHMENTS

Caution: Before attaching or removing the attachments of your styler, unplug the device and wait for the attachments to cool down.

· To attach the styling head to the body, find the triangular symbol on the top of the head release button. Then, align the triangular symbol on the selected head with the corresponding position on the body and lightly turn it to the left until you hear a click.

· To detach the head of your styler, push down on the head release button and then gently turn the head to the right to separate it from the body.



	Drying Head	Comb Head	50 mm round brush	70 mm oval volume brush	34 mm right and left hand curling nozzle
					
Usage Feature	Before styling, it dries the hair.	By massaging the hair roots, it gently detangles the knots and prepares the hair for the styling.	Create soft waves on hair, allowing you to achieve various styles.	Helps add volume to medium and long hair from root to tip and assists in achieving salon-standard blowouts.	It wraps the hair with air flow and curls it easily. It allows you to make right and left hand curls with two separate nozzles.

USAGE TIPS

- After washing your hair, dry it with a towel to remove excess moisture.
- After removing the moisture from your hair, you can use the drying nozzle to dry it. Additionally, you can also use the comb attachment to detangle the knots while drying it.
- Then, refer to the chart to choose the appropriate styling attachment for your desired hair style.



USE OF PRODUCT

Attention: Make sure your hands are completely dry before plugging in.

- Plug in your appliance
- Turn the on/off switch on the appliance to the "I" position.
- You can start the styling process by selecting the appropriate speed and temperature for your hair.



Use of brushes:

- Before you start styling your hair, be sure to comb your hair and prepare it by separating it into strands.
- Place the desired brush nozzle onto the body.
- Shape the bottom layer of your hair first. Then continue by styling the hair on the top.
- You can get straight or wavy hair with the 50 mm round brush. You can achieve light waves by wrapping your hair around the brush and sliding the brush towards the ends of your



hair, or you can blow dry your hair straight by brushing it from root to tip. The 70 mm oval volume brush adds volume to your hair from root to tip and helps you achieve a salon-standard blow-dry. You can achieve nature waves by wrapping your hair around the brush and sliding the brush towards the ends of your hair, or you can get voluminous straight hair by brushing your hair from root to tip.

- Without taking your hair off the brush, turn the temperature to cold mode and set the hair style.
- You can give your curls their final shape by shaping them with a comb, brush or your fingers.
- After your appliance has cooled down, you can clean the hair remaining between the brushes by hand or with the help of a wide-tooth comb.

Use of curling nozzle:

- When styling the hair on the right side of your head, you should use the nozzle that shows a clockwise direction.
- When styling the hair on the left side of your head, you should use the nozzle that shows counterclockwise.
- After placing the appropriate nozzle on the body, bring the nozzle closer to your hair, starting from the roots of your hair. It wraps the hair with air flow. Keep your hair wrapped according to your hair type and length. Once your hair is styled, slowly lower the appliance downwards and separate from the curls.
- After styling, you can apply hairspray or another styling product to hold your hair in place.
- To turn the product off, set it to the '0' position.
- Place the appliance on a heat-resistant surface until it cools down.



CLEANING and CARE

Due care and cleaning procedures are too easy and short, in order to ensure using your **Arzum Revolution Ionic Hot Air Styler** for many years.

- Disconnect the power cord from wall socket and allow the appliance to cool down.
- Never immerse the appliance into water or other liquids.
- Do not wrap the cord of your hair styler around the unit.
- During cleaning, remove the accessories and clean the hair that is stuck between the brushes. You can repeat these steps depending on the frequency of use of your device.
- Wipe off the body (outer surface) of your appliance using a slightly damp cloth, and then make it dry.
- Store your device in a cool and dry place.


CLEANING the FILTER

· You can have your appliances motor cleaned automatically to extend its life and maintain its performance.

· Press and hold the temperature and speed buttons simultaneously while your appliance is off position and then press the on-off button.

The motor cleans by running in reverse for 8 seconds. During the cleaning process, the temperature LED indicator is off and the wind speed LED flashes. After the cleaning process is finished, the motor stops for about 1 second and then automatically returns to the last mode. The cleaning process is thus completed.





Product life 7 years

TECHNICAL SPECIFICATIONS

220-240V ~ 50-60 Hz

1300-1500 W

HANDLING AND SHIPMENT

- During handling and shipment, your appliance must be kept in original package in order to prevent damages to its parts.
 - Keep at normal position during shipment.
- Do not drop the product when transporting and protect from impacts.
- After delivery of the product, failures and damages that may occur while transporting are not covered by warranty.

The product is in compliance with the WEEE Directives.

WEEE

This product contains recyclable materials that compliance with the WEEE directives. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.



Manufacturer:

Yueli Group Co., Ltd.

999 Kaifa E. Road Zhouxiang Town, Cixi, Ningbo, 315324

Zhejiang, China

Tel: +86-574-58967801 - Fax: +86-574-58967888

Importer:

Arzum Elektrikli Ev Aletleri San. ve Tic. A.Ş.

Defterdar Mah. Otakçılar Cad. Sinpaş Flatofis

No:78 İç Kapı No: 34 EYÜPSULTAN / İSTANBUL

Made in China / Menşei Çin'dir

Tel: +90 212 467 80 80

www.arzum.com



REVOLUTION

AR5166-17 فرشاة تصفيف الشعر



- 9- فرشاة سيراميك مدورة 50 مم
- 10- فرشاة سيراميك بيضوي 70 مم
- 11- رأس حبيكة ذات الاتجاه الأيمن 34 مم
- 12- رأس حبيكة ذات الاتجاه الأيسر 34 مم
- 13- حلقة التعليق
- 14- مدخل كابل قابل للدوران بزاوية 360 درجة

- 1- الجذع الرئيسي
- 2- زر التشغيل/الإيقاف
- 3- زر عيار الحرارة على 4 مراحل
- 4- زر عيار السرعة على 3 مراحل
- 5- مؤشر عيار الحرارة والسرعة
- 6- زر اخراج الأكسسوار
- 7- رأس المجفف
- 8- رأس المشط

شكرا الختياركم فرشاة تصفيف الشعر من العاملة التجارية أرزوم. هذا المنتج هو أي ضا واحد من المنتجات التي نقدمها لكم لجعل حياتكم أسهل.

طقم اعطاء الشكل للشعر بالهواء من جهاز ارزوم Revolution Ionic Arzum يجفف شعركم ويعطيه الشكل ويفتح المتداخل بسهولة. يبرز أحقيتكم بخصوص اختياركم هذا الجهاز بفضل مردوديته وجودته العالية. ي رجبى قراءة دليل المستخدم بعناية والاحتفاظ به للرجوع إليه عند الحاجة في المستقبل من أجل الحصول على أفضل أداء للجهاز.

تحذيرات هامة

يتوافق مع جهد الكهرباء الموجود في مكانكم. في حال وجود أي اختالفات، فإن شركتنا لن تكون مسؤولة عن أي أعطال قد تحدث ويتم التعامل مع هذا النوع من الأعطال خارج نطاق الضمان. • تم تصميم جهازكم للاستخدام المنزلي فقط. وال ينبغي أن يستخدم الأغراض تجارية أو صناعية. ونتيجة لذلك، فإن الأعطال التي قد تحدث سوف يتم التعامل معها خارج نطاق الضمان.

• يمكن استخدام هذا الجهاز من قبل الأطفال الذين تزيد أعمارهم عن 8 سنوات والشخص الذين يعانون من إعاقة جسدية أو حسية أو عقلية أو ليس لديهم خبرة أو معرفة كافية بطريقة الاستخدام، شرط أن يكون الاستخدام تحت الإشراف أو بعد الطالع على تعليمات استخدام الجهاز بطريقة آمنة وبعد إدراك المخاطر المتضمنة. يحظر لعب الأطفال بالجهاز. يجب أل

يتدخل الأطفال في تنظيف الجهاز أو صيانته دون إشراف. • في حالة استخدامكم الجهاز في الحمام، فتأكدوا من إخراجهم من مقبس الكهرباء بعد الاستخدام أنه قد يسبب خط را في المناطق التي قد يتالمس فيها مع المياه.

• للحصول على حماية ضافية، فمن المستحسن وضع قاطع الدائرة الحالية المتبقية (RCD) وينبغي أل يتجاوز قاطع التيار هذا 30 ملي أمبير. استشيروا وكيل خدمات أو شخص مؤهل مشابه.

• أل تستخدموا هذا المنتج في أحواض الاستحمام، أحواض الغسيل، كابينات الدش أو الأحواض والمناطق الأخرى المملوءة بالماء. يحظر

تما ما وضع الجهاز في الماء! • لتجنب إلحاق الضرر بالجهاز، أل تستخدموا أسالك التمديد التي توفر تيارا غير كاف.

• أل تلمسوا الجهاز الخاص بكم عند وقوعه في الماء أو في سوائل أخرى، اسحبوا القابس من مأخذ الكهرباء وقبل الاستخدام مرة أخرى

- اذهبوا الى مركز الخدمة المعتمدة أرزوم أجل فحص الجهاز.
- ال تستخدموا الجهاز الخاص بكم يدين مبتلين وأقدام عارية أبد ا.
- أبقوا كابل تصفيف الشعر بعيدا عن الأجزاء الساخنة للجهاز أثناء الاستخدام وبعد الاستخدام.
- ال تستخدموا الجهاز الخاص بكم إذا كان كابل الجهاز أو القابس معي با، إذا أصابه التلف بسبب الوقوع أو أسباب أخرى، ال تفتحو الجهاز وال تحاولوا إصلاحه بأنفسكم. في حال حدوث أية عطل أوصلوا الجهاز الى مركز الخدمة المعتمدة أرزوم . تأكدوا من استخدام قطع الغيار الأصلية فقط في جهازكم.
- تحذير: ألن لوحات تصفيف الشعر تصبح ساخنة جدا، يجب إبقاها بعيدا عن اليدين والعيون والأذنين والوجه، وال تجعلونها تلمس منطقة العنق. استخدموا الجهاز عن طريق الإمساك من مقبض الاستخدام والمناطق ذو العزل الحراري فقط.
- عندما يكون الجهاز ساخنا، يعمل أو موصول بمأخذ الكهرباء ال تتركوه على الأسطح غير المقاومة للحرارة مثل الخشب، البالستيك، المنسوجات وما شابه.
- ال تقوموا بتشغيل الجهاز وكابل الجهاز ملفوف.
- تجنبوا الحركات التي من شأنها أن تلحق الأضرار بكابل وقابس الجهاز. ال تحملوا الجهاز من الكابل، امسكوه من القابس من أجل سحبه من مأخذ الكهرباء، ال تسحبوا الكابل من أجل تلك الغاية. ال تقوموا بلف الكابل حول الجهاز.
- تأكد دائما من أن أجزاء الجهاز باردة قبل تركيبها وفكها.
- حافظوا على نظافة فرشاة الجهاز. ال تستخدموا الغبار، الألوساخ، رذاذ تثبيت الشعر، الهام، جل الشعر أو أي مواد أخرى.
- تأكدوا دو ما من سحب القابس برفق من مأخذ الكهرباء بعد الانتهاء من استخدام الجهاز. أثناء عدم استخدام الجهاز، احرص على إزالته من مأخذ الكهرباء قبل القيام بالتنظيف والعناية.
- اتركوا الجهاز في منطقة مناسبة من أجل أن يبرد، حيث سيستمر الجهاز بالحفاظ بالسخونة لفترة من الزمن بعد الانتهاء من الاستخدام.
- تأكدوا من أن الجهاز قد برد تما ما قبل تخزين الجهاز أو قبل القيام بتنظيف الجهاز.
- استخدموا الجهاز على النحو الموصى به وبشكل مناسب للغرض الخاص به.

تحذير:

1- يحظر تماماً استخدام فرشاة تصفيف الشعر الخاصة بكم في الحمام، الدش، أو في المناطق التي قد تأتي في اتصال



مع الماء، وال تستخدموه أبداً وأيديكم مبتلة.

2- أثناء عدم استخدامكم للجهاز، قوموا دوماً بإغلاق الجهاز عن طريق الضغط على زر الإغلاق وتأكدوا من إزالة قابس الجهاز من مأخذ الكهرباء.

حتى أثناء عدم عمل الجهاز، فمن الخطورة الاحتفاظ به قريباً من الماء والقابس موصول بمأخذ الكهرباء.

3- عندما تريد فك رأس الجهاز، انتظر فترة قصيرة حتى يبرد الجهاز. حيث أن الجهاز يسخن أثناء الاستخدام، فقد يكون رأس الجهاز ساخناً أيضاً.

4- انتظر فترة قصيرة بعد استخدام الجهاز حتى تبرد الأجزاء الإضافية قبل فكها لأنها قد تكون ساخنة.

محرك قوي

• مجفف للشعر بكل راحة و إعطاء الشكل بفضل محرك 1500 BLDC واط وذات المردودية العالية والطويلة العمر.

تحكم ثرمو-حراري

• يوزع الحرارة بشكل متجانس على سطح الفرشاة ويمنع ارتفاع درجة الحرارة المفرط. يوفر تشكيل وتصفيف آمن وسريع.

سطح فرشاة سيراميك

• يشكّل ويصفف خيوط الشعر بسهولة عن طريق منع تعرضها للتلف من درجات الحرارة العالية. يجعل شعرك يتألق بصحة.

تقنية الأيونات

• تقنية الأيونات تمنع كهربية الشعر. يوفر السهولة في تمشيط الشعر ويعطيه مظهراً لامعاً.

ميزة التنظيف الاوتوماتيكي

• من أجل تمديد عمر محرك جهازك و حماية مردوديته يمكنك اجراء التنظيف الاوتوماتيكي.

• استمري بالضغط معاً زر الحار وزر السرعة في نفس الوقت وذلك أثناء ما يكون الجهاز مغلقاً و بعدها مباشرة اضغط على زر التشغيل- الإيقاف.

• يقوم المحرك بالدوران بالاتجاه المعاكس لمدة 8 ثواني للقيام بعملية النظافة. أثناء عملية النظافة يكون مؤشر الليد / LED الحارري مغلقاً و يشتعل


- وينطفئ ليد / LED سرعة الرياح .
- بعد الانتهاء من عملية التنظيف يوقف المحرك لمدة 1 ثانية تقريبا وعقبها يرجع أوتوماتيكيا الى وضعه الأخير.
- وتكون عملية التنظيف قد انتهت بهذا الشكل.

وضعية الذاكرة

يعمل على حفظ وتسجيل عيار الحرارة والسرعة بشكل أوتوماتيكي وذلك للاستعمال التالي.

مراحل عيار السرعة والحرارة

- ☀ زر عيار الحرارة: يشتعل مؤشر الليد / LED بشكل أحمر
- ☁ زر عيار السرعة: يشتعل مؤشر الليد / LED بشكل أزرق
- يملك زر عيار الحرارة 4 مراحل . في المرحلة الأولى يعمل على نفخ الهواء البارد و لا يشتعل مصباح التنبيه ليد / LED.
- كلما ازدادت المرحلة كلما ازدادت الحرارة و تشتعل مصابيح الليد / LED الثلاثة 3 كاملة بشكل أحمر.
- يملك زر عيار الحرارة 3 مراحل. كلما ازدادت المرحلة كلما ازدادت السرعة و تشتعل مصابيح الليد / LED الثلاثة 3 كاملة بشكل أزرق.
- يمكنك المباشرة بالاستعمال من خلال اختيار مستوى الحرارة والسرعة المناسب لشعركم.

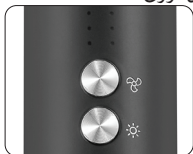

تغيير الأجزاء والرؤوس

- انتباه: تأكد دائماً من أن قابس الجهاز مسحوب من المأخذ وأن أجزاء الجهاز باردة قبل تركيب وفك أجزاء مصفف الشعر.
- اعثر على إشارة المثلث الموجودة في الجزء العلوي من زر فصل الرأس لربط الرأس المراد لتصفيف الشعر على جسم الجهاز. بعد ذلك، قم بمحاذاة علامة المثلث الموجودة على الرأس المختار بحيث تتوافق مع هذا الجزء عند تركيبها على الجسم. ثم ستسمع صوت كليك عندما تديرها قليلاً إلى اليسار.
- اضغط على زر فصل الرأس لأسفل لأجل إزالة رأس مصفف الشعر. ثم افصل الرأس عن جسم الجهاز عن طريق تدوير الرأس قليلاً إلى اليمين.



رأس التجهيف	رأس المشط	فرشاة دائرية 50 مم	فرشاة بيضوية الحجم 70 مم	رأس حبيكة ذات الاتجاه الأيمن والأيسر 34 مم
ميزة الاستخدام	يتم تجهيف الشعر قبل التصفيف. يمكن حل تشابكات الشعر بلطف وإعداده للتصفيف من خلال تدليك جذور الشعر باليد.	تصفيف الشعر بهوجات لينة يسمح لك للحصول على أنماط مختلفة.	يضيف الحجم والكثافة إلى الشعر من جذوره إلى أطرافه ويساعد على تحقيق تصفيف شعر بمستوى صالونات تصفيف الشعر.	يعمل على لف الشعر مع تيار الهواء و يوفر الحبيكة المائلة، يوفر لكم عمل الحبيكات باتجاه الأيمن والأيسر بواسطة رأسين منفصلين.

توصيات الاستخدام

- جفف شعرك بمنشفة لإزالة الرطوبة الزائدة من شعرك بعد غسل الشعر.
- بعد التخلص من الرطوبة في الشعر، يمكنك التجهيف برأس التجهيف. كما يمكن إجراء التجهيف مع فتح التشابكات في الشعر باستخدام رأس المشط.

- اختر جزء مناسب عن طريق الاستفادة من الجدول لتصفيف الشعر بالشكل المرغوب.

استخدام المنتج

تنبيه: قبل توصيل القابس بالمقبس الكهربائي تأكد من جفاف يديك.



- أوصلي قابس الجهاز بأخذ الطاقة الكهربائية.
- ضعي مفتاح التشغيل/الإيقاف الموجود بالجهاز بدورانه إلى الوضع "I".
- يمكنك البدء بتصفيف شعرك من خلال اختيار السرعة ودرجة الحرارة المناسبة لشعرك.

استخدام رؤوس الفرشاة:

- قبل المباشرة بتصفيف شعرك واعطائه الشكل قومي بتمشيطة حتما وجهزيه من خلال فصله إلى خصلات.



- ثبتي رأس الفرشاة الذي تريدينه على الجذع.
- قومي بتصفيف شعرك بدءا من الاقسام التحتية . بعدها استمري بتصفيف الاقسام العلوية من شعرك.

- يمكنك الحصول على الشعر المستوي أو المتموج بواسطة الفرشاة المدورة 50 مم .

لفي شعرك حول الفرشاة ومن ثم زحلي الفرشاة باتجاه أطراف شعرك وبذلك

- تحصلين على شعر خفيف التموجات أو فرشي شعرك بدءاً من الجذور نحو الأطراف للحصول على شكل مستو.
- تضيف الفرشاة البيضاء ذات الحجم 70 مم حجماً لشعرك من الجذور إلى الأطراف وتساعد على تحقيق شكل قياسي في الصالون.
- يمكنك الحصول على موجات طبيعية عن طريق لف شعرك حول الفرشاة وتمرير الفرشاة نحو أطراف شعرك، أو يمكنك الحصول على شعر كثيف ومستو عن طريق تفريش شعرك من الجذور إلى الأطراف.
- بدون فصل شعرك من الفرشاة، حولي الحرارة إلى الوضع البارد وثبتي شكل الشعر.
- يمكنك إعطاء تعجيدات شعرك شكلها النهائي من خلال تشكيلها بمساعدة مشط أو فرشاة أو أصابعك.
- بعد أن يبرد جهازك، يمكنك تنظيف الشعر المتبقي بين الفرشاة يدوياً أو بمساعدة مشط واسع الأسنان.

استخدام رؤوس الحبكة:

- عند تصفيف الشعر على الجانب الأيمن من رأسك، يجب عليك استخدام الرأس الذي يشير إلى اتجاه عقارب الساعة.
- عند تصفيف الشعر على الجانب الأيسر من رأسك، يجب عليك استخدام الرأس الذي يشير إلى عكس اتجاه عقارب الساعة.
- بعد وضع الرأس المناسب على الجذع، قومي بتحريك الرأسية بالقرب من الشعر، بدءاً من جذور شعرك.
- يلف الشعر مع تدفق الهواء. حافظي على شعرك ملفوفاً حسب نوع شعرك وطوله.
- بعد تصفيف شعرك، أنزلي الجهاز ببطء إلى الأسفل وافصليه عن الحبكات.
- بعد عملية التصفيف، يمكنك استخدام مثبت الشعر أو أي مصفف آخر لإصلاح شعرك.
- لإغلاق المنتج، قومي بتحويله إلى وضعية الـ "0".
- ضعيه على سطح مقاوم للحرارة حتى يبرد.



التنظيف والعناية

- الصيانة والتنظيف الذي تحتاجينه من أجل استخدام مجموعة تصفيف الشعر مع تدفق الهواء Revolution Ionic.
- أرزوم
- لسنوات عديدة هي أمر سهلة وقصيرة للغاية.



- افصلي جهازك من المقبس وانتظري حتى يبرد.
- لا تغمري جهازك في الماء أو أي سائل آخر.
- لا تلف كابل جهاز تصفيف الشعر حول جسم الجهاز.
- قومي أثناء التنظيف بفصل الرؤوس من أماكنها وكذلك تنظيف الشعر المتبقي على الفرشاة.
- امسحي جسم الجهاز (من الخارج) بقطعة قماش مبللة قليلاً ثم جفّفيه جيداً.
- كرري هذه العمليات وفقاً لتكرار استخدام الجهاز.
- قومي بتخزين منتجك في مكان بارد وجاف.

تنظيف الفلتر

- من أجل تمديد عمر محرك جهازك و حماية مردوديته يمكنك اجراء التنظيف الاوتوماتيكي.
- استمري بالضغط معا زر الحرارة وزر السرعة في نفس الوقت وذلك أثناء ما يكون الجهاز مغلقا و بعدها مباشرة اضغط على زر التشغيل- الايقاف.
- يقوم المحرك بالدوران بالاتجاه المعاكس لمدة 8 ثواني للقيام بعملية النظافة.
- أثناء عملية النظافة يكون مؤشر الليد / LED الحراري مغلقا و يشتعل وينطفئ ليد / LED سرعة الرياح .
- بعد الانتهاء من عملية التنظيف يوقف المحرك لمدة 1 ثانية تقريبا وعقبها يرجع اوتوماتيكيا الى وضعه الأخير.
- وتكون عملية التنظيف قد انتهت بهذا الشكل.



عمر استخدام الماكينة: 7 سنوات

المواصفات الفنية

220-240V ~ 50-60 Hz

1300-1500 W

الخصائص التي يجب الانتباه اليها أثناء الشحن والنقل:

- من أجل عدم تعرض الجهاز وأقسامه للضرر أثناء الشحن والنقل يجب حفظه في علبته الأصلية.
- احفظ المنتج أثناء الشحن في وضعه الطبيعي.
- انتبه لئلا يسقط الجهاز أثناء النقل واحفظه ضد الصدمات.
- الاعطال والاضرار الحاصلة أثناء الشحن بعد تسليم المنتج الى الزبون لا تدخل ضمن نطاق الضمان.

ملام لتعليمات الـ WEEE

WEEE

يتكون هذا الجهاز من أجزاء تم صنعها عبر عملية إعادة التدوير المتطابقة وتوجيهات الـ WEEE؛ لذا يجب عدم رميه في القمامة. ومن فضلك، راجع أقرب مركز للجمع؛ تحقيقاً لإعادة تدوير هذا الجهاز.



المستورد:

Yueli Group Co., Ltd.

999 Kaifa E. Road Zhouxiang Town, Cixi, Ningbo, 315324

Zhejiang, China

Tel: +86-574-58967801 - Fax: +86-574-58967888

المنتج:

Arzum Elektrikli Ev Aletleri San. ve Tic. A.Ş.

Defterdar Mah. Otakçılar Cad. Sinpaş Flatofis

No:78 İç Kapı No: 34 EYÜPSULTAN / İSTANBUL

Made in China / Menşei Çin'dir Tel: +90 212 467 80 80

www.arzum.com

