

arzum OKKA


BARISTA SOLO M



KULLANMA KILAVUZU INSTRUCTION MANUAL دليل المستخدم

Yetkili servis listesi için kullanım kılavuzunun son sayfasına bakınız.
For the authorized service list, please check the last page of the user manual.

ARZUM OKKA BARISTA SOLO M SEMI-AUTOMATIC ESPRESSO MACHINE

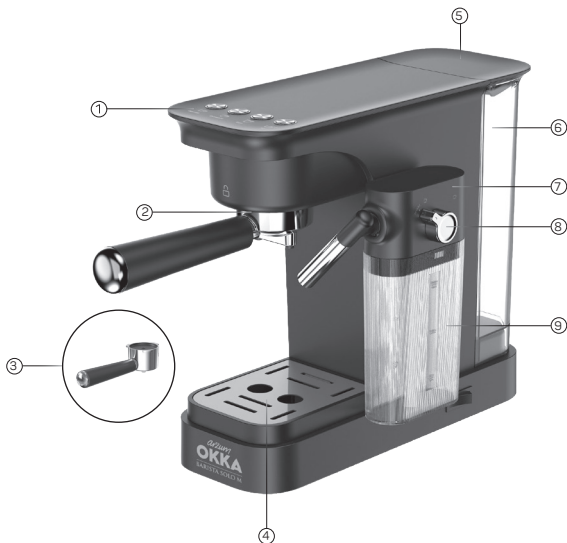

- | | |
|-----------------------------------|------------------------------|
| 1. Control panel | 6. Water tank |
| 2. Portafilter | 7. Milk tank cover |
| 3. Capsule-compatible portafilter | 8. Milk foam adjustment knob |
| 4. Drip tray grid | 9. Milk container |
| 5. Water tank cover | |

Lifespan: 7 years
Mains Voltage: 220-240V ~ 50-60 Hz
Power withdrawn: 1400W

ARZUM OKKA BARISTA SOLO M

OK0060-04, OK0060-05

TABLE OF CONTENTS

1. IMPORTANT WARNINGS	18
------------------------------	-----------

2. FUNCTION DESCRIPTION	22
--------------------------------	-----------

- 1. Function Overview
 - 2. Turning on the Coffee Machine
 - 3. Espresso / Double Espresso Preparation Function
 - 4. Cafe Latte / Cappuccino / Milk Foam Preparation Function
-

3. POSSIBLE ISSUES AND TROUBLESHOOTING	25
---	-----------

4. CLEANING AND MAINTENANCE	27
------------------------------------	-----------

- 1. Cleaning the Milk Container
 - 2. Cleaning/Rinsing Function
 - 3. Descaling Function
 - 4. Storage
 - 5. Handling and Shipment
-

Thank you for choosing the **Arzum Okka Espresso Machine**. This product is one of the items we offer to make your life easier.

To get the best performance from your machine, please read the user manual carefully and keep it for future reference.

IMPORTANT WARNINGS

· Ensure that the voltage indicated on your **Arzum Okka BARISTA SOLO M Semi-Automatic Espresso Machine** matches the voltage in your location. Our company cannot be held responsible for any malfunctions resulting from a mismatch, and such malfunctions will not be covered under warranty.

- This device is designed for use in homes and similar settings:
 - Staff kitchens in shops, offices, and other work environments;
 - Farmhouses;
 - By guests in hotels, motels, and other lodging-style environments;
 - Bed-and-breakfast-style establishments.
- This device should be used only by individuals who have been provided with information, supervision, or instructions regarding its safe use and who understand the hazards it poses. Your product should not be used by individuals with physical (visual, auditory) or mental disabilities,

children, or those lacking experience or knowledge, without the supervision of a person responsible for their safety

. Children must be supervised while using the product, and ensure they do not play with it. Store the device and power cord in places inaccessible to children under 8 years of age.

. This device may be used by children 8 years of age and older provided they are supervised or instructed on the safe use of the device and understand the associated hazards.

Cleaning and user maintenance should not be performed by children unless they are at least 8 years old and are under supervision. Keep the device and its cord in places where children under 8 years of age cannot reach them.

. This device should be used by persons (including children) who have been provided with information,

supervision, or instructions regarding safe use and understand the associated hazards (including children).

- Your product should not be used by people with physical (visual, auditory) or mental disabilities, children, or those lacking experience or knowledge, without the supervision of a person responsible for their safety.
- Children should be supervised while using the product, and care should be taken to ensure that children do not play with the product. Store the appliance and power cord out of the reach of children under 8 years of age.
- The coffee maker should not be placed inside a cabinet while in use.
Caution: Keep all packaging materials away from children; these materials are a potential hazard that could cause death by suffocation.
- Do not fill your appliance with more water than the maximum level.

- Your appliance is intended for household use. It must not be used for commercial or industrial purposes. Otherwise, it will be excluded from the warranty.
- Keep your appliance out of reach of children and away from them.
- Be sure to plug your device into a grounded outlet. Do not use extension cords that provide insufficient current to avoid damaging your device.
- Do not place the **Arzum Okka Espresso** Machine on or near direct heat sources such as stoves or ovens.
- Place your device on a sturdy, level surface. Do not place it on the edge of a table or countertop. Even a small bump could cause the device to fall. Remember that your coffee machine may be filled with hot water.
- Make sure the cord does not dangle over the edge of your desk or countertop or come into contact with another device.
- Avoid any actions that could damage the device's cable or plug. Do not carry the device by its cable; when unplugging it, hold the plug—**NEVER** pull on the cable.
- Do not tamper with your device in any way other than for cleaning and maintenance. Do not use the device if the cord or plug is defective, damaged due to a fall, or for any other reason. Do not attempt to repair it yourself; contact an **Arzum Authorized Service Center**. Be sure to use only original replacement parts for your device.
- Unplug the appliance from the outlet when not in use or while cleaning, and ensure it has cooled down completely before cleaning.
- Protect your hands from the steam emitted while the water is boiling, and do not allow children to use the machine.
- Before operating the **Arzum Okka Semi-Automatic Espresso Machine**, make sure the water tank and filter lid are **SECURELY** closed.
- **DO NOT** under any circumstances submerge the machine in water or any other liquid; do not wash it in the dishwasher; and do not use it in the bathroom or similar high-humidity areas.
- You can add water and ground coffee while the machine is turned off.
- **Under no circumstances** should you put anything other than water in the machine's water tank.
- Never leave the device's power base or electrical connectors wet. If they get wet, unplug the device from the outlet before drying it, and do not operate the device until it is completely dry.
- **DO NOT** put anything other than ground coffee in your machine's filter holder.

- Be careful not to burn yourself with water or steam coming from the machine, or due to improper use of the machine.
- The heating surface remains hot due to residual heat after use; **DO NOT** touch it **under any circumstances**.
- If you will not be using the machine for an extended period, please turn it off and unplug it.

2.FUNCTION INTRODUCTION

1. Control Panel Introduction



2. Turning on the Coffee Machine

- Plug the power cord into an outlet; you will hear a 1-second beep from the machine. After hearing the beep, the lights on the machine's buttons will turn on one by one. When the lights on the coffee buttons start to flash, the machine has begun to heat up. When the lights on the buttons stop flashing and remain lit, the machine is ready to operate.

3. Espresso / Double Espresso Preparation Function

- To make an espresso, place a single or double espresso basket into the portafilter. Depending on the basket you've chosen, fill the filter with 1 or 2 scoops of freshly ground coffee, and use the scoop to level off any excess grounds. To tamp the grounds evenly and firmly, apply firm pressure with the tamper end of the scoop to compact the coffee. If you want to use a coffee capsule, place the coffee capsule into the capsule-compatible portafilter. Place the portafilter under the coffee spout. Align it with the unlock symbol, slide it into the slot, and slowly turn it to the right toward the lock symbol.
- Place a coffee cup directly under the coffee spout.

NOTE: For optimal use, press the **"Espresso"** button using a single espresso basket with one spoonful of ground coffee, or, and press the

"Espresso" button to make an espresso; for a double espresso, use the double espresso basket with two scoops of ground coffee, press the **"Espresso"** button, and then press the **"Double Cup"** button.

- During the brewing process, only the button for the coffee you selected will flash, while the other two coffee preparation buttons will remain off.
- When the brewing process is complete, a "beep" will sound and all 3 coffee buttons will light up again. The machine enters standby mode. Remove the portafilter by turning it clockwise. Clean and dry the portafilter after each use.

4. Caffè Latte / Cappuccino / Milk Foam Preparation Function

- Hold the milk container with one hand and pull the lid to the right to remove it. Pour milk into the container. The milk level should always remain below the maximum mark.
- The recommended temperature for milk is 4–8 °C (~40–46 °F).
- Replace the milk container lid and place the milk container into the machine. It should click audibly into place. Make sure the milk container is properly seated.
- Adjust the angle of the milk froth spout relative to the cup. Use the control knob to adjust the milk froth consistency to your preference.
- Place the selected basket into the portafilter. Fill the filter with coffee grounds. Tamp the grounds using the flat side of the coffee spoon.
- If you wish to use a coffee capsule, place the capsule into the portafilter compatible with the capsule.
- Place the portafilter under the coffee spout. Align it with the unlock symbol, push it into the slot, and slowly turn it to the right until it aligns with the lock symbol.
- Press the **"Latte"** or **"Cappuccino"** button depending on the milk-based drink you wish to prepare, and the brewing process will begin. During the brewing process, only the button you selected will light up, while the other two coffee preparation buttons will turn off. If you only want to prepare milk foam, hold down the **"Latte"** button for 3 seconds.
- For a single serving, use a single espresso basket with one spoonful of ground coffee, or use the capsule-compatible portafilter with a coffee capsule, and press the **"Latte"** or **"Cappuccino"** button; For a double serving, use the double espresso basket with two scoops of ground coffee, press the **"Latte"** or **"Cappuccino"** button, and then press the **"Double Cup"** button.

· When your drink is ready, you will hear a **"beep"** from the machine and all three coffee buttons will light up again. The machine will enter standby mode.

Note: If the milk container is not attached or has been removed, the **"Cappuccino"** and **"Latte"** buttons will become inactive and will slowly flash. Once the milk container is attached, these buttons will reactivate and the lights will remain on continuously.

WARNING: Do not remove the milk container while preparing milk-based beverages; otherwise, there is a risk of burns.

Note: After a milk-based beverage is prepared, the **"Double Cup"** button will begin to flash to remind you that the milk container needs to be cleaned.

Note: If no operation is performed, the machine will enter standby mode after 30 minutes.

Function	Button	Coffee Volume (unit: mL)
Espresso	When the espresso button is pressed once	30-50
Espresso	When the espresso button and the double cup button are pressed	60-90
Cappuccino	When the Cappuccino button is pressed once	50-110
Cappuccino	When the Cappuccino button and the double cup button are pressed	120-200
Latte	When the Latte button is pressed once	90-150
Latte	When the Latte button and the double cup button are pressed	180-250

3. POSSIBLE ISSUES AND TROUBLESHOOTING

Issue	Cause	Solution
Coffee isn't flowing	No water	Fill the water container
	The portafilter's inner hole is clogged	Clean the portafilter
	The water outlet is clogged	Clean the water outlet
	The water container is not properly positioned	Properly position the water container
Coffee is leaking from the basket	There is dirt inside the silicone ring	Clean the inside of the silicone ring
	The coffee grounds are too fine	Replace it with coarser-ground coffee
	The coffee grounds are packed too tightly	Tamp the coffee grounds more loosely
	Coffee has accumulated around the edge of the portafilter	Clean the edge of the portafilter
	The gasket is broken	Contact customer service
The coffee is cold	The power button is not staying lit in the "On" position	Wait until the "On" button stays lit
	The coffee machine's heater is broken/malfunctioning	Contact after-sales service
The pump is very noisy when running	The water tank is empty	Fill the water tank
	The water tank is not properly installed	Place the water tank correctly
The coffee is too soft	The coffee grounds haven't been tamped down firmly enough	Tamp the coffee grounds more firmly
	There isn't enough coffee grounds	Add more coffee grounds
	The coffee grounds are ground too coarsely	Use finer-ground coffee

Sorun	Neden	Çözüm
The coffee is too dark	The coffee grounds were not tamped tightly enough	Tamp the coffee grounds more appropriately
	Too much coffee grounds	Reduce the amount of coffee grounds
	The portafilter is clogged	Clean the portafilter
	The coffee grounds are ground too finely	Use coarser ground coffee
	The water outlet is clogged	Clean the water outlet
The portafilter cannot be rotated into the correct position	Too much coffee grounds	Reduce the amount of coffee grounds
	It won't rotate even though the coffee grounds amount is normal	Contact customer service
Coffee brewing is normal, but milk isn't coming out of the milk container	The milk frothing system is clogged	Add a small amount of citric acid to the milk container and run the cleaning function
Not enough milk foam was produced	The milk used isn't cold enough	Use milk at approximately 8°C
The Double Cup button is lit	Milk container cleaning reminder	Press and hold the Double Cup button for 3 seconds to start the milk container cleaning process
"Espresso"-> "The 'Cappuccino' -> 'Latte' -> 'Double Cup' buttons light up in sequence"	It's time to clean the coffee machine	Follow the instructions in the descaling step
The machine is not drawing water	The machine has not been used for a long time	Press and hold the "Double Cup" button for 3 seconds to enter cleaning mode

4. CLEANING AND MAINTENANCE

1. 1. Cleaning the Milk Container:

Pour water into the milk container up to the MAX level and press the **"Double Cup (☞)"** button. Then remove the milk container parts and rinse them under clean water. Clean the milk container after every use to prevent milk residue.

2. Cleaning/Rinsing Function:

- If you do not use the machine for more than five consecutive days, rinse and empty the water tank.
- The drip tray and grid can be washed by hand under clean water.
- Do not put the portafilter in the dishwasher

3. Descaling Function:

- The machine prompts you to descale every 300 brews. When descaling is required, the **"Espresso," "Latte," "Cappuccino" and "Double Cup"** buttons light up in sequence.
- Place a large container under the brewing head. Fill the water tank to the MAX level and mix in descaler or citric acid.
- When you press and hold the **"Espresso"** and **"Latte"** buttons simultaneously for more than 3 seconds, the first descaling cycle will begin. The descaling process will be complete after a total of 6 cycles.
- Empty the container under the brewing head and reposition it. Clean the water container and fill it with clean water up to the MAX level.
- Once the cycle is complete, the machine returns to standby mode and is ready for use again.

4. Storage:

- If you do not plan to use the device for an extended period, store it carefully.
- Unplug the device before storing it and let it cool down.
- Store the device in a cool, dry place.
- Keep the device and its cord out of reach of children.


5. Transportation and Shipping:

- When transporting or shipping the device, make sure to keep it in its original packaging.

The device's packaging will protect it damage.

- Do not place heavy objects on top of the device or its packaging. The device may be damaged.
- If the device is dropped, it may stop working or suffer permanent damage.

أرزوم أوكا مايسترو سولو (ARZUM OKKA) آلة الإسبريسو شبه الأوتوماتيكية (BARISTA SOLO M)

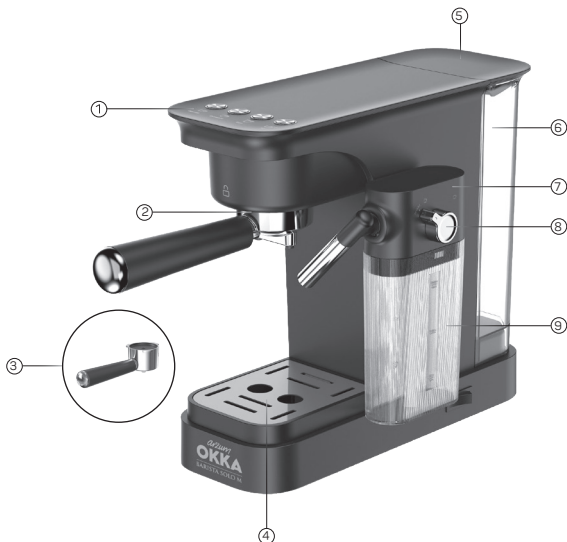

- 1- لوحة التحكم
- 2- المرشح النقال
- 3- مصفاة نقالة متوافقة مع الكبسولة
- 4- شبكة صينية التنقيط
- 5- غطاء خزان المياه

- 6- خزان الماء
- 7- غطاء خزان الحليب
- 8- مقبض ضبط رغوة الحليب
- 9- وعاء الحليب

العمر الافتراضي: 7 سنوات
التيار الكهربائي الجهد: 220-240 فولت ~ 50-60 هرتز
السلطة المسحوبة: W1400

ARZUM OKKA BARISTA SOLO M

أرزوم أوكا مايسترو سولو
OK0060-04, OK0060-05

جدول المحتويات

30

1. تحذيرات مهمة

33

2. وصف الوظيفة

1. نظرة عامة على الوظيفة

2. تشغيل آلة تحضير القهوة

3. وظيفة تحضير الاسبريسو / الاسبريسو المزدوج

4. وظيفة تحضير قهوة لاتييه القهوة / كابتشينو / رغوة الحليب

3. المشاكل المحتملة واستكشاف الأخطاء وإصلاحها

36

4. التنظيف والصيانة

37

6. التنظيف والصيانة

1. تنظيف حاوية الحليب

2. وظيفة التنظيف/الشطف

3. وظيفة إزالة الترسبات الكلسية

4. التخزين

5. المناولة والشحن

شكراً لاختبارك آلة الإسبريسو أوكا من أرزوم. هذا المنتج هو أحد المنتجات التي نقدمها لجعل حياتك أسهل . للحصول على أفضل أداء من آلتك، يرجى قراءة دليل المستخدم بعناية والاحتفاظ به للرجوع إليه في المستقبل.

تحذيرات مهمة

- تأكد من أن الجهد الكهربائي الموضح على ماكينة الإسبريسو شبه الأوتوماتيكية من أرزوم أوكا باريستا سولو إم الخاصة بك يتطابق مع الجهد الكهربائي في موقعك. لا يمكن أن تتحمل شركتنا المسؤولية عن أي أعطال ناتجة عن عدم التطابق، ولن يتم تغطية مثل هذه الأعطال بموجب الضمان.
- تم تصميم هذا الجهاز للاستخدام في المنازل والأماكن المماثلة:- مطابخ الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى;
-المزارع;
-بواسطة النزلاء في الفنادق والموتيلات وغيرها من بيئات الإقامة;
-من قبل النزلاء في الفنادق والموتيلات وغيرها من بيئات النزل.
- يجب أن يستخدم هذا الجهاز فقط من قبل الأفراد الذين تم تزويدهم بالمعلومات أو الإشراف أو التعليمات المتعلقة باستخدامه الآمن والذين يفهمون المخاطر التي يشكلها. يجب ألا يستخدم هذا المنتج من قبل الأفراد الذين يعانون من إعاقات جسدية (بصرية أو سمعية) أو ذهنية، الأطفال أو الأشخاص الذين يفتقرون إلى الخبرة أو المعرفة، دون إشراف شخص مسؤول عن سلامتهم

• يجب الإشراف على الأطفال أثناء استخدام المنتج، والتأكد من عدم لعبهم به. يجب تخزين الجهاز وسلك الطاقة في أماكن لا يمكن للأطفال دون سن 8 سنوات الوصول إليها.

• يمكن استخدام هذا الجهاز من قبل الأطفال بعمر 8 سنوات فما فوق شريطة أن يتم الإشراف عليهم أو إرشادهم حول الاستخدام الآمن للجهاز وفهم المخاطر المرتبطة به.

يجب عدم إجراء التنظيف والصيانة من قبل الأطفال إلا إذا كان عمرهم 8 سنوات على الأقل وتحت إشرافهم. احتفظ بالجهاز

وسلكه في أماكن لا يمكن للأطفال دون سن 8 سنوات الوصول إليها

• يجب استخدام هذا الجهاز من قبل الأشخاص (من فيهم الأطفال) الذين تم تزويدهم بالمعلومات أو الإشراف أو التعليمات المتعلقة بالاستخدام الآمن وفهم المخاطر المرتبطة به (بما في ذلك الأطفال).

- لا ينبغي استخدام المنتج من قبل الأشخاص الذين يعانون من إعاقات جسدية (بصرية أو سمعية) أو عقلية أو الأطفال أو من يفتقرون إلى الخبرة أو المعرفة، دون إشراف شخص مسؤول عن سلامتهم.
- يجب الإشراف على الأطفال أثناء استخدام المنتج، ويجب توخي الحذر لضمان عدم لعب الأطفال بالمنتج. يجب تخزين الجهاز وسلك الطاقة بعيداً عن عن متناول الأطفال دون سن 8 سنوات.
- يجب عدم وضع صانعة القهوة داخل الخزانة أثناء الاستخدام. تحذير: احفظي جميع مواد التغليف بعيداً عن متناول الأطفال؛ فهذه المواد تشكل خطراً محتملاً قد يتسبب في

الوفاة بسبب الاختناق.

- لا تملأ الجهاز بمياه أكثر من المستوى الأقصى.
- جهازك مخصص للاستخدام المنزلي. يجب عدم استخدامه لأغراض تجارية أو صناعية. وإلا فسيتم استبعاده من الضمان.
- احفظ جهازك بعيداً عن متناول الأطفال وبعيداً عنهم.
- تأكد من توصيل جهازك بمقبس مؤرض. لا تستخدم أسلاك التمديد التي توفر تياراً غير كاف لتجنب إتلاف جهازك.
- لا تضع ماكينة الإسبريسو من أرزوم أوكا على مصادر الحرارة المباشرة مثل المواقد أو الأفران أو بالقرب منها.
- ضع الجهاز على سطح متين ومستو. لا تضعه على حافة الطاولة أو سطح العمل. فحتى أي ارتطام صغير قد يتسبب في سقوط الجهاز. تذكر أن ماكينة القهوة قد تكون مملوءة بالماء الساخن.
- تأكد من عدم تدلي السلك على حافة الطاولة أو سطح العمل أو ملامسته لجهاز آخر.
- تجنب أي إجراءات قد تؤدي إلى تلف كابل الجهاز أو قابسه. لا تحمل الجهاز من الكابل الخاص به؛ عند فصله، أمسك القابس - لا تسحب الكابل أبداً.
- لا تعبث بجهازك بأي شكل من الأشكال بخلاف التنظيف والصيانة. لا تستخدم الجهاز إذا كان السلك أو القابس معيباً.
- أو تلف بسبب السقوط أو لأي سبب آخر. لا تحاول إصلاحه بنفسك؛ اتصل بمركز خدمة معتمد من أرزوم. تأكد من استخدام قطع الغيار الأصلية فقط لجهازك.
- افصل الجهاز من مأخذ التيار الكهربائي في حالة عدم استخدامه أو أثناء التنظيف، وتأكد من تبريده تماماً قبل التنظيف.
- احم يدك من البخار المنبعث أثناء غليان الماء ، ولا تسمح للأطفال باستخدام الجهاز.
- قبل تشغيل ماكينة الإسبريسو شبه الأوتوماتيكية من أرزوم أوكا، تأكد من إغلاق خزان المياه وغطاء الفلتر بإحكام.
- لا تقم تحت أي ظرف من الظروف بغمر الماكينة في الماء أو أي سائل آخر، ولا تغسلها في غسالة الأطباق، ولا تستخدمها في الحمام أو أي مكان آخر عالي الرطوبة.
- يمكنك إضافة الماء والقهوة المطحونة أثناء إيقاف تشغيل الماكينة.
- لا يجب وضع أي شيء آخر غير الماء في خزان الماء الخاص بالجهاز تحت أي ظرف من الظروف.
- لا تترك قاعدة طاقة الجهاز أو الموصلات الكهربائية مبللة أبداً. إذا تبللت، افصل الجهاز من المقبس قبل تجفيفه، ولا تقم بتشغيل الجهاز حتى يجف

تماماً.

- لا تضع أي شيء آخر غير القهوة المطحونة في حامل فلتر الجهاز
- احرص على عدم حرق نفسك بالماء أو البخار المتصاعد من الجهاز، أو بسبب الاستخدام غير السليم للجهاز.
- يظل سطح التسخين ساخناً بسبب الحرارة المتبقية بعد الاستخدام؛ لا تلمسه تحت أي ظرف من الظروف.

2. مقدمة عن الوظائف

1. مقدمة لوحة التحكم



2. مقدمة عن الوظائف

1. تشغيل ماكينة تحضير القهوة

- قم بتوصيل سلك الطاقة بالمأخذ؛ ستسمع صوت صفير لمدة ثانية واحدة من الماكينة. بعد سماع الصفير، ستضيء الأضواء على أزرار الماكينة واحداً تلو الآخر. عندما تبدأ الأضواء على أزرار القهوة في الوميض، فهذا يعني أن الآلة قد بدأت في التسخين. عندما تتوقف الأضواء على الأزرار عن الوميض وتبقى مضاءة، تكون الآلة جاهزة للعمل.

2. تشغيل ماكينة تحضير القهوة

- قم بتوصيل سلك الطاقة بالمأخذ؛ ستسمع صوت صفير لمدة ثانية واحدة من الماكينة. بعد سماع الصفير، ستضيء الأضواء على أزرار الماكينة واحداً تلو الآخر. عندما تبدأ الأضواء على أزرار القهوة في الوميض، فهذا يعني أن الآلة قد بدأت في التسخين. عندما تتوقف الأضواء على الأزرار عن الوميض وتبقى مضاءة، تكون الآلة جاهزة للعمل.

3. وظيفة تحضير الإسبريسو / الإسبريسو المزدوج

- لتحضير قهوة الإسبريسو، ضع سلة إسبريسو مفردة أو مزدوجة في مصفاة القهوة. اعتماداً على السلة التي

اخترتها، املاً الفلتر بمغرفة أو مغرقتين من القهوة المطحونة الطازجة، واستخدم المغرفة لتسوية أي كمية زائدة من القهوة المطحونة. لدك القهوة المطحونة بشكل متساو وثابت، اضغط بقوة باستخدام طرف المغرفة لضغط القهوة. إذا كنت ترغب في استخدام كبسولة القهوة، ضع كبسولة القهوة في مرشح القهوة المتوافق مع الكبسولة. ضع المصفاة النقالة تحت صنوبر القهوة. قم بمحاذاة الكبسولة مع رمز فتح القفل، ثم حركها في الفتحة، وأدورها ببطء إلى اليمين باتجاه رمز القفل.

- ضع فنجان القهوة مباشرة تحت فوهة القهوة.
- ملحوظة: للاستخدام الأمثل، اضغط على زر "إسبريسو" باستخدام سلة إسبريسو واحدة مع ملعقة واحدة من البن المطحون، أو اضغط على زر "الإسبريسو" لتحضير قهوة الإسبريسو؛ لتحضير قهوة الإسبريسو المزدوجة، استخدم سلة الإسبريسو المزدوجة مع مغرقتين من القهوة المطحونة، واضغط على زر "الإسبريسو"، ثم اضغط على زر "فنجان مزدوج".
- أثناء عملية التخمير، سيومض فقط الزر الخاص بالقهوة التي اخترتها، بينما سيظل زرا تحضير القهوة الآخرين مغلقين.
- عند اكتمال عملية التخمير، سيصدر صوت "صوت تنبيه" وستضيء أزرار القهوة الثلاثة مرة أخرى. تدخل الآلة في وضع الاستعداد. قم بإزالة المرشح النقال عن طريق تدويره في اتجاه عقارب الساعة. نظف المرشح النقال وجففه بعد كل استخدام.

4. وظيفة تحضير الكافيين لاتييه / الكابتشينو / رغوة الحليب

- أمسك وعاء الحليب بيد واحدة واسحب الغطاء إلى اليمين لإزالته. يسكب الحليب في الوعاء. يجب أن يبقى مستوى الحليب دائماً أقل من العلامة القصوى.
- درجة الحرارة الموصى بها للحليب هي 4-8 درجات مئوية (~ 40-46 درجة فهرنهايت).
- استبدل غطاء وعاء الحليب وضع وعاء الحليب في الآلة. يجب أن تصدر صوت طقطقة مسموعة في مكانها. تأكد من أن حاوية الحليب مثبتة في مكانها الصحيح.
- اضبط زاوية فوهة رغوة الحليب بالنسبة للكوب. استخدم مقبض التحكم لضبط قوام رغوة الحليب حسب تفضيلاتك.
- ضع السلة المحددة في المصفاة النقالة. املاً الفلتر بالقهوة المطحونة. احك القهوة المطحونة باستخدام الجانب المسطح من ملعقة القهوة.
- إذا كنت ترغب في استخدام كبسولة قهوة، ضع الكبسولة في المصفاة النقالة المتوافقة مع الكبسولة

- ضع المرشح النقال تحت صنوبر القهوة. قم بمحاذاة الكبسولة مع رمز فتح القفل، وادفعها في الفتحة، ثم أدرها ببطء إلى اليمين حتى تتماشى مع رمز القفل.
- اضغط على زر "لاتيه" أو زر "كابتشينو" حسب المشروب الذي ترغب في تحضيره بالحليب، وستبدأ عملية التخمير. أثناء عملية التخمير، سيضئ الزر الذي اخترته فقط، بينما سينطفئ الزران الآخران لتحضير القهوة. إذا كنت تريد تحضير رغوة الحليب فقط، اضغط باستمرار على زر "لاتيه" لمدة 3 ثوانٍ.
- للحصول على حصة واحدة، استخدم سلة إسبريسو واحدة مع ملعقة واحدة من القهوة المطحونة، أو استخدم مرشح القهوة المتوافق مع الكبسولات مع كبسولة قهوة، واضغط على زر "لاتيه" أو "كابتشينو".
- للحصول على حصة مزدوجة، استخدم سلة الإسبريسو المزدوجة مع ملعقتين من القهوة المطحونة، واضغط على زر "لاتيه" أو "كابتشينو"، ثم اضغط على زر "كوب مزدوج".
- عندما يصبح مشروبك جاهزاً، ستسمع صوت "صغير" من الآلة وستضيء أزرار القهوة الثلاثة مرة أخرى. ستدخل الآلة في وضع الاستعداد.
- ملاحظة: إذا لم تكن حاوية الحليب موصولة أو تمت إزالتها، سيصبح زرا "كابتشينو" و "لاتيه" غير نشطين وسيومضان ببطء. بمجرد توصيل حاوية الحليب، سيعاد تنشيط هذه الأزرار وستظل الأضواء مضاءة باستمرار.
- تحذير: لا تقم بإزالة حاوية الحليب أثناء تحضير المشروبات التي تحتوي على الحليب، وإلا فإن ذلك سيؤدي إلى خطر الإصابة بحروق.
- ملاحظة: بعد تحضير مشروب يحتوي على الحليب، سيبدأ زر "كوب مزدوج" بالوميض لتذكيرك بضرورة تنظيف وعاء الحليب.
- ملاحظة: إذا لم يتم إجراء أي عملية، ستدخل الآلة في وضع الاستعداد بعد 03 دقيقة.

الوظيفة	الزر	(حجم القهوة (مل)
إسبريسو	عند الضغط على زر الإسبريسو مرة واحدة	30-50
إسبريسو	عند الضغط على زر الإسبريسو وزر الكوب المزدوج	60-90
كابتشينو	عند الضغط على زر الكابتشينو مرة واحدة	50-110
كابتشينو	عند الضغط على زر الكابتشينو وزر الكوب المزدوج	120-200
لاتيه	عند الضغط على زر اللاتيه مرة واحدة	90-150
لاتيه	عند الضغط على زر اللاتيه وزر الكوب المزدوج	180-250

3. المشكلات المحتملة واستكشاف الأخطاء وإصلاحها

المشكلة	السبب	الحل
لا يتدفق القهوة	خزان الماء فارغ	املاً خزان الماء
	فتحات الفلتر مسدودة	نظّف حامل الفلتر
	مخرج الماء مسدود	نظّف مخرج الماء
	خزان المياه ليس في موضعه الصحيح	يجب تصحيحه ليكشف هابملاً نازخ معض
قلسلاً نم برستة قوهقلاً	هناك أوساخ داخل حلقة السيليكون	نظّف حلقة السيليكون من الداخل
	القهوة المطحونة ناعمة جداً	استبدلها بقهوة مطحونة أكثر خشونة.
	توضع القهوة المطحونة بإحكام شديد	احك القهوة المطحونة بشكل أكثر مرونة
	تراكمت القهوة حول حافة المرشح النقال.	نظف حافة المرشح النقال
	الحشية مكسورة	اتصل بخدمة العملاء
ة دراب قوهقلاً	ي قاعاضم لظلا لة قاطلا رز "ليغشد" معضو	انتظر حتى يظل زر "تشغيل" مضاً
	تعطل/تعطل سخان ماكينة القهوة	اتصل بخدمة ما بعد البيع
ليغشتملاً منة لة دجة بخاصة مخضماً	خزان المياه فارغ	املاً خزان المياه
	خزان المياه غير مثبت بشكل صحيح	ضع خزان المياه بشكل صحيح
لقهوة طرية جداً	لم يتم ذك القهوة المطحونة بقوة كافية.	قم بذك القهوة المطحونة بقوة أكبر
	لا توجد كمية كافية من القهوة المطحونة	أضف المزيد من القهوة المطحونة
	مطحون القهوة المطحونة بشكل خشن للغاية	استخدم قهوة مطحونة بشكل أنعم

المشكلة	السبب	الحل
أدجة تمكاد قوهقلا	لم يتم دك القهوة المطحونة بإحكام بما فيه الكفاية	احك القهوة المطحونة بشكل أكثر ملاءمة
	القهوة المطحونة ناعمة جداً	استبدلها بقهوة مطحونة أكثر خشونة
	انسداد المرشح النقال	نظف المرشح النقال
	القهوة المطحونة ناعماً جداً	استخدم قهوة مطحونة بشكل أخشن
	مخرج الماء مسدود	نظف مخرج المياه
لأقنلا حشرملا ريودت نكميد لا يححصلنا عضولا إلى	رثكاًة نوحطملا قوهقلا قمك مزلالا نم	قلل كمية القهوة المطحونة
	لا يمكن تدويرها على الرغم من أن كمية القهوة المطحونة طبيعية	اتصل بخدمة العملاء
نكل، بي عيبط قوهقلا ريمخت ءاعو نم جررخيد لا، بيلحلا بيلحلا	نظام إزباد الحليب مسدود	أضف كمية صغيرة من حمض الستريك إلى خزان الحليب وشغل وظيفة التنظيف
قمفاك بيلح قوغر جاتنلا متمد	الحليب المستخدم ليس بارداً بما فيه الكفاية	استخدم الحليب على درجة حرارة 8 درجات مئوية تقريباً
زر الكوب المزدوج مضاء	تذكير تنظيف وعاء الحليب	اضغط مع الاستمرار على زر الكوب المزدوج لمدة 3 ثوانٍ لبدء عملية تنظيف وعاء الحليب
لجهاز لا يسحب الماء	لم يتم استخدام الجهاز لفترة طويلة	اضغط مع الاستمرار على زر الكوب المزدوج لمدة 3 ثوانٍ للدخول إلى وضع التنظيف

4. التنظيف والصيانة

1. تنظيف وعاء الحليب

اسكب الماء في وعاء الحليب حتى مستوى MAX واضغط على زر "كوب مزدوج (☞)". ("ثم أزيل أجزاء وعاء الحليب واشطفيها تحت الماء النظيف. نظفي وعاء الحليب بعد كل استخدام لمنع بقايا الحليب).

2. وظيفة التنظيف/الشطف

- إذا لم تستخدم الآلة لأكثر من خمسة أيام متتالية، اشطفي خزان المياه وأفرغيه.
- يمكن غسل صينية التنقيط والشبكة يدوياً تحت ماء نظيف.
- لا تضع مرشح التنقيط في غسالة الأطباق

3. وظيفة إزالة الترسبات الكلسية:

- • تطلب منك الآلة إزالة الترسبات الكلسية كل 003 عملية تحضير. وعندما يكون من الضروري إزالة الترسبات الكلسية، تضئ أزرار "إسبريسو" و"لاتيه" و"كابتشينو" و"كوب مزدوج" بالتتابع.
- ضع حاوية كبيرة تحت رأس التخمير. املاً خزان المياه إلى مستوى MAX واخلط في مزيل الترسبات الكلسية أو حمض الستريك.
- عند الضغط مع الاستمرار على زرّي "Espresso" و"Latte" في نفس الوقت لأكثر من 3 ثوان، ستبدأ دورة إزالة الترسبات الكلسية الأولى. ستكتمل عملية إزالة الترسبات الكلسية بعد 6 دورات.
- أفرغ الحاوية الموجودة أسفل رأس التخمير وأعد وضعها. نظف خزان المياه واملأه بالماء النظيف حتى مستوى MAX.
- بمجرد اكتمال الدورة، تعود الآلة إلى وضع الاستعداد وتصبح جاهزة للاستخدام مرة أخرى

4. التخزين:

- إذا كنت لا تخطط لاستخدام الجهاز لفترة طويلة، قم بتخزينه بعناية.
- افصل الجهاز قبل تخزينه واتركه يبرد.
- قم بتخزين الجهاز في مكان بارد وجاف.
- احفظ الجهاز وسلكه بعيداً عن متناول الأطفال.

5. النقل والشحن:

- عند نقل الجهاز أو شحنه، تأكد من الاحتفاظ به في عبوته الأصلية.
- ستحمي عبوة الجهاز من التلف.
- لا تضع أشياء ثقيلة فوق الجهاز أو عبوته. فقد يتعرض الجهاز للتلف.
- إذا تم إسقاط الجهاز، فقد يتوقف عن العمل أو يتعرض للتلف دائم.

5. المناولة والشحن:

- تعامل مع الجهاز في عبوته الأصلية أثناء المناولة والشحن.
- ستحمي عبوة الجهاز الجهاز من التلف المادي.
- لا تضع أشياء ثقيلة على الجهاز أو عبوته. قد يكون الجهاز تالفاً.
- قد يؤدي سقوط الجهاز إلى توقفه عن العمل أو التسبب في تلف دائم.

****من حق كل وكيل لشركة ARZUM حول العالم إعطاء فترة ضمان وعمر افتراضي مختلف لمنتجات ARZUM & ARZUM OKKA تختلف حسب ما يتوافق مع ظروف بلد الوكالة.**